










 


## Programme chart

FABRIC	MAXIMUM WEIGHT OF DRY LAUNDRY	HEAT	TIME SETTING (Minutes)	
			DAMP IRON 	DRY 
Cotton, Linen 	4.5 kg		50-90	80-120
Cotton, Linen 	2 kg		40-60	60-80
Synthetics 	1.5 kg			20-40
Polyester-Cotton 	2 kg		40-50	50-60
Blankets: Mixtures Synthetics	4.5 kg 4.5 kg	 		120 60-100


**NOTE:** Drying times depend on the weight and size of the articles, the type of fabric, how damp they are and how dry you need them. Higher spin speeds on your washer require less drying time. To reduce creasing never overload.


## Fabric care


If in any doubt of the type of fabric from which the garment is made, check the care label inside the garment.

The vast majority of textile articles can safely be tumble dried. However, we **do not** recommend you tumble dry woollen or wool mixture articles unless the article is labelled as being suitable.

### CARE LABELS YOU MAY FIND ON YOUR FABRICS:

 Tumble drying beneficial.

 Do not tumble dry.

 Dry flat.

## Points to remember

### Do

- Sort the clothes into groups of different fabrics.
- Check that all fastenings are closed and pockets are empty.
- Turn sweaters inside out.
- Dry large and small articles in the same load if possible.
- Check the programme chart for the correct heater setting.
- Clean the filter after removing the dried clothes.

### Don't

- Overload the dryer.
- Place dripping wet articles in the dryer.
- Dry articles that have been treated with a dry cleaning fluid.
- Dry articles containing foam rubber or rubberlike materials in the dryer.
- Dry large articles alone as they tend to roll up and so increase drying time.

### TIPS:

- To reduce static electricity in fabrics, use a fabric conditioner during the final rinse of your washing.
- Dry delicate articles, e.g. tights, in a pillow case.
- Take synthetics out of dryer as soon as programme has finished to prevent creasing.

## Any problems

### IF THE CLOTHES ARE NOT DRY AFTER NORMAL DRYING TIME:

- Check that the filter is clean.
- Check that you used the correct heater setting.
- Check that the venting hose is not blocked (sometimes a strong wind may cause a back pressure).
- Check that you have not set the timer within a cool down period.

### IF YOUR MACHINE DOES NOT WORK, CHECK THE FOLLOWING POINTS BEFORE CALLING A SERVICE ENGINEER:

- Check that there is a supply of electricity.
- Check that the machine is switched on and the door properly closed.
- Check the plug internal connections and fuse, if applicable.
- Check that the heater cut-out has not operated. Simply press the red button on the right hand side at the back of your dryer. If it has operated then a sharp "click" will be heard. This cut-out only operates if the airflow is severely restricted so make sure the filter is clean and that all other restrictions are removed before re-starting.



TUMBLE DRYER

AWG274

Technical data

Overall dimensions: Height 85 cm  
Width 59.5 cm  
Depth 53 cm  
Maximum dry weight of cotton, linen: 4.5 kg.  
For electrical ratings see plate on rear of machine.


**WARNING: THIS APPLIANCE MUST BE EARTHED.**  
This product is manufactured to comply with the radio interference requirements of the council directive 82/499/EEC. It is intended for domestic use and not for commercial applications such as hairdressers.

Optional accessories

A comprehensive range of accessories are available from your dealer/retailer to cater for varying installations, they are:—  
**Rear Venting Kit AWF 692** to convert the air outlet from front to rear of your machine with a fully retractable 2.2m (7ft. 3in.) long hose to lead the damp air to an open door/window.  
**Wall/Window Vent Kit AWF 798/2** to make a permanent installation through a wall or window. (You will also require the rear venting kit AWF 692 to achieve this).  
**Stacking Kit AWF 696** to enable your dryer to be secured onto the top of front loading washing machines to save floor space.


Installation

- 1 Install your dryer near a window so that the warm damp air can escape.
- 2 We strongly recommend you to use a separate venting hose to avoid condensation.
- 3 Never block the air inlets at the back and do not allow fluff to accumulate around your dryer.
- 4 Put the filter in its operating position as below.

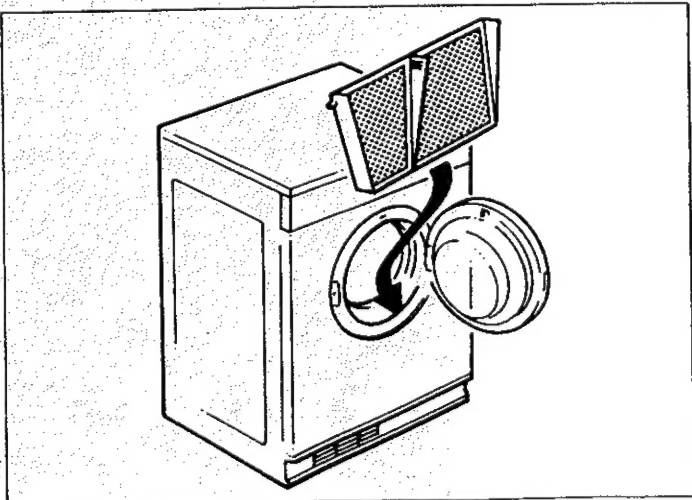


5 Wipe the drum and door with a damp cloth to remove any dust. Any initial smell from the heater should disappear after the first period of heating.


To reverse door opening proceed as follows:

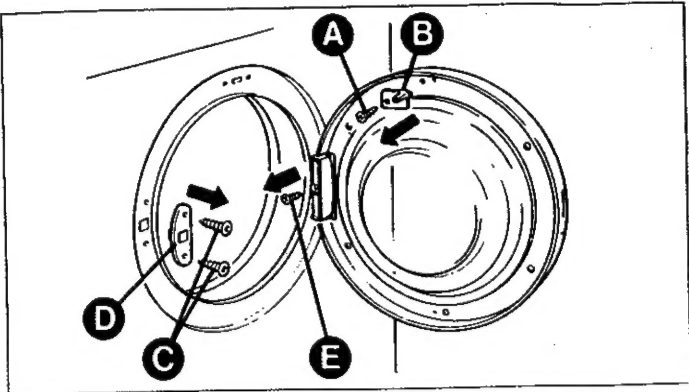


Open the door. Undo screw A remove switch strike B and replace screw. Remove screws C and latch plate D. Remove hinge cover screw E. Close the door.

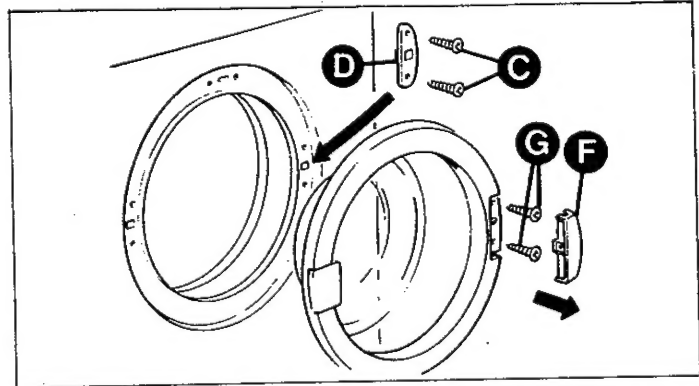

Pull the hinge cover F forwards to remove it. Remove two outer screws G. Remove door. Fit latch plate D with screws C.

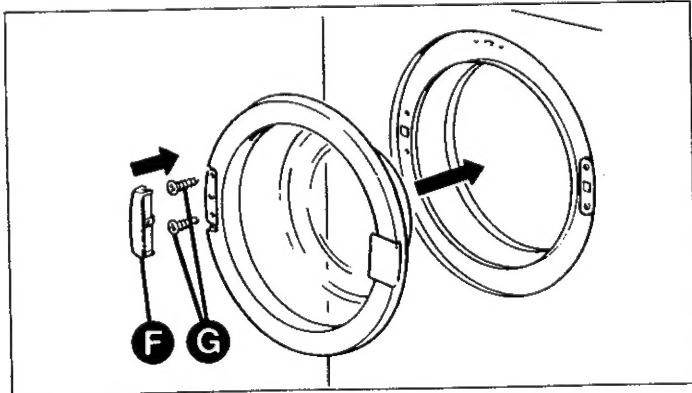


Reverse door and fit to dryer in closed position. Refit screws G and hinge cover F. Open the door.

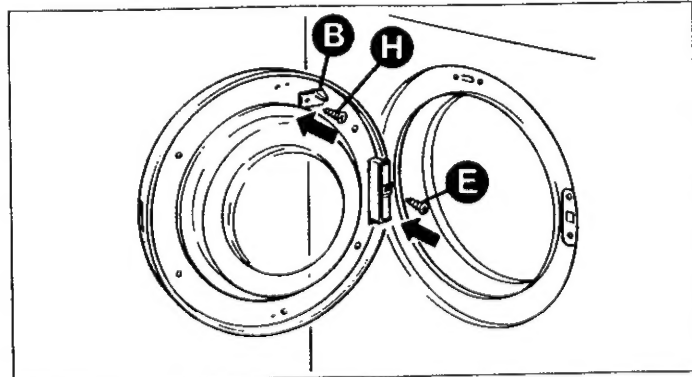

Fit screw E to secure hinge cover. Remove screw H at top of door and refit switch strike B as shown.

Control panel

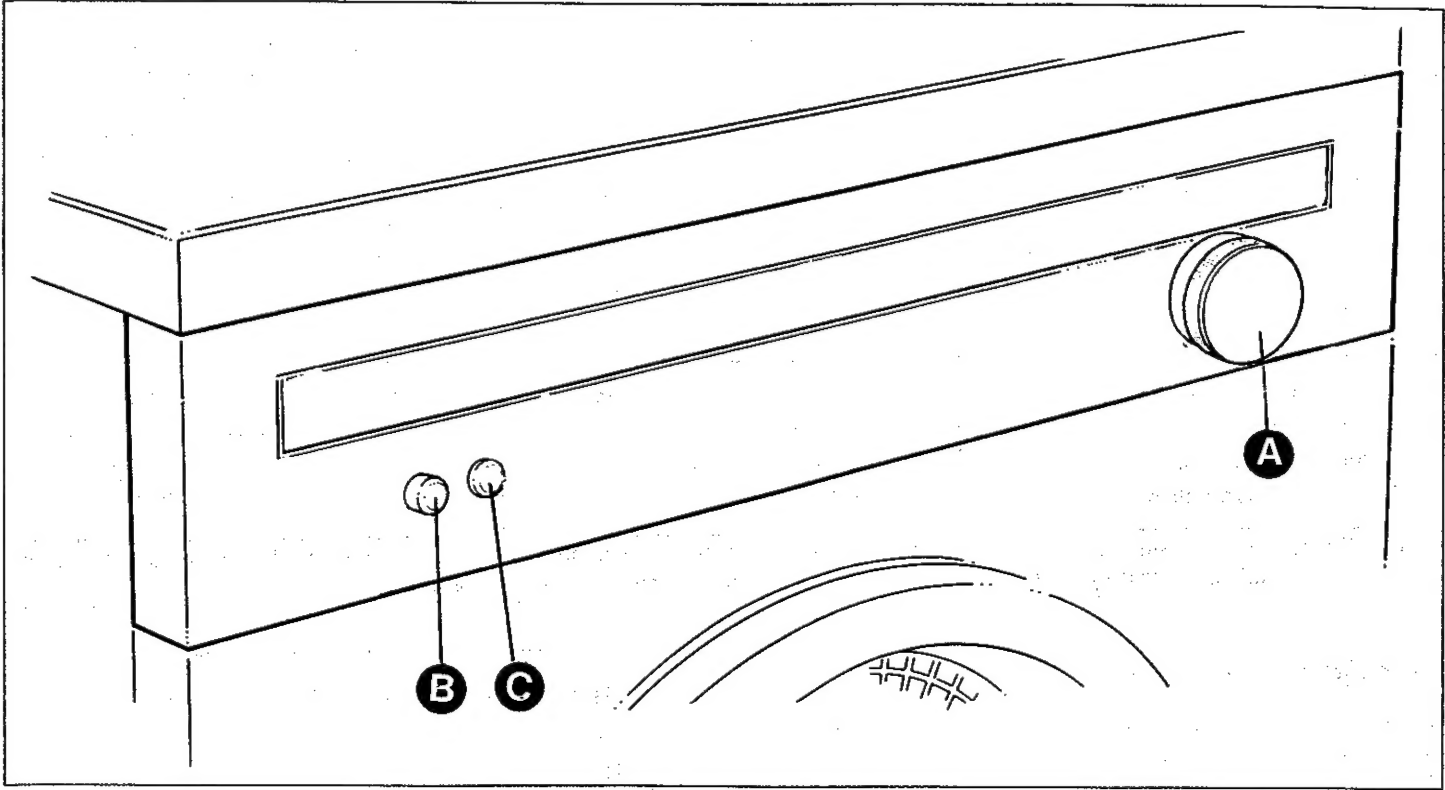

A The timer can be set for up to 120 minutes. Turn the knob clockwise to the time required. There is an automatic cool down period of approximately 10 minutes at the end of each setting.

B Low heat position switch  
C High heat position switch

Operation procedure

1	A. Sort out clothes into groups of similar fabrics B. Check all fastenings are closed and pockets empty C. Roll dripping wet clothes in a towel to remove excess water D. Turn sweaters inside out
2	A. Open the door B. Load clothes loosely into the drum, load sheets first starting with one corner C. Remember it is best to dry small and large articles together
3	A. Close the door B. Dry your hands C. Check that the timer is in the 'O' position D. Plug in the machine
4	A. Select correct heater position (see programme chart) B. To start the cycle, set the timer (see programme chart) The drum will begin to rotate at this point and stop when the timer reaches the 'O' position.

5	A. To stop the machine in the middle of a programme simply open the door, and the drum will stop moving B. To re-start close the door C. To lengthen or shorten the drying time at any time during the programme turn the timer knob
6	We recommend you to stop your dryer and redistribute large items such as sheets several times during the programme
7	A. After removing the dried clothes clean the filter as follows: Pull the filter upwards Remove any thread or fluff by hand or with a soft brush Slide the filter back Wash the filter occasionally in detergent solution and with a soft brush to remove small particles B. Disconnect from the electricity supply